

# Product Instructions

1 When the product in transport, handling, installation process should prevent bump.

2 Should keep the rear axle shell clean and no any foreign body before installing the product. (Otherwise it will damage the gears)

3 The product was tested on the test bench, according to technical parameters were adjusted, sealing set, so the user may not be dismantled and adjusted.

4 When installing this product, rear axle bridge shell hole can not pad of paper, should be painted “ anaerobic “

5 The hardness of crown wheel and pinion is HRC58-64, the user must use the gear oil has a hyperbolic function, heavy-duty gear oil, and the oil should be properly raise and maintain, using Conventional gear oils, Fake hypoid gear oil, Metamorphism and gear oils containing impurities, and the lack of gear oil, will cause serious erosion gear early, fight tooth gear grinding and other damage, and abnormal noise.

6 Do not overload the vehicle of this product use, otherwise it will cause severe early gear grinding, fight tooth gear damage such as broken shaft.